Download PLC and HMI programs without programming cables

If you don't have programming cables for Wecon PLC or HMI, other than using Ethernet port if available, you can also use a USB Drive. Here's how:



1. Open PLC Editor, open your program, follow the picture to make a PLC compiled file.

2. Find the file you just made at <u>C:</u>, it should be called update.bin. The name is better left unchanged. Put this file on a usb drive.

3. Open PI Studio, open your project, follow the picture below to make your HMI file. Please make sure you are choosing the right version of your system (HMI V1.0 or HMI V2.0). If you are not sure, check "Update System" option when downloading to upgrade your firmware to V2.0. Consult with us if you are not sure if you should upgrade because there'll be major differences.

Close all	⊖ Delete	English 🔹	-	State:0				₽ ₩	M Compile	⊠ Off-line		? Help
Save	Properties	Languag •	5 *	100%	, III		」 世 □ こ 月 ◀		× Cancel	☑ On-line		(i) About
Save all	Manager	-	Regular 🔹	A Text Co	lor 🖥	i Di I	P B 4	Ē 🔂	JDownloa	l 🗓 UDisk Dow	nload	1
Screen			Appearance							Tool		Help
Velcome	0:Screen		6									
88888												
	Usb flash dick download tool ×											
	HMI V0 HMI V2.	0										
	O Update project O Update all firmware to current version O OS version upgrade from V1.0 to V2.0 Source file: C:\Users\joshu\Documents\Wecon_Test\HMIProject\HMIProject.Wmt3 Browse											
										Browse		
CDEFGH	Usb flash disk:	C:\	project.wmt3							Browse		
	Allow and the stand of the stan											
							ОК) (c	lose	Help		

4. The result file has a different name for V1 and V2. Find the new file you just made, put it on the USB drive as your PLC file.

5. Plug the USB drive onto the back of your HMI screen. If your screen is 3.5" or 4.3", you might need a adapter as it only has a MicroUSB port.

6. Connect the PLC to the HMI, make sure they are running as normal and talking to each other. Then press top right corner of the screen while it's working for about 12 seconds until you hear a beep. The screen should have entered SYSTEM SETTINGS page. Once you get into this page, it should be fairly easy to figure out how to do the updating. There's no difference which get downloaded first.